

#### FUNCTIONS

Press and hold switch. Release to stop.

T.O.F. : 4 pulses at 2Hz.

D.B.S. : 3 pulses at 50Hz followed by a 0.75 second pause, then 2 pulses at 50Hz.

P.T.C. : 50Hz for 5 seconds, followed by a 3 second pause, then a continuous 1Hz.

1 Hz : Continuous 1Hz.

OUTPUT : 200 microsecond pulse.  
constant current. 100mA maximum.

AUDIO : Indicates patient current flowing.



CAUTION WHEN USED WITH CARDIAC PACEMAKERS.

WHEN FLASH IS DEEP RED CHANGE BATTERY  
BATTERY : MN1604 or similar alkaline type.

#### FUNCTIONS

Press and hold switch. Release to stop.

T.O.F. : 4 pulses at 2Hz.

D.B.S. : 3 pulses at 50Hz followed by a 0.75 second pause, then 2 pulses at 50Hz.

P.T.C. : 50Hz for 5 seconds, followed by a 3 second pause, then a continuous 1Hz.

1 Hz : Continuous 1Hz.

OUTPUT : 200 microsecond pulse.  
constant current. 100mA maximum.

AUDIO : Indicates patient current flowing.



CAUTION WHEN USED WITH CARDIAC PACEMAKERS.

WHEN FLASH IS DEEP RED CHANGE BATTERY  
BATTERY MN1604 or similar alkaline type.

DB35

M67