- If so equipped -

- If so equipped -

RS232 has been tested with Windows Hyperterminal. The setup changes with different Windows version. If other software than Windows Hyperterminal is used, consult with factory.

RS232 has been tested with Windows Hyperterminal. The setup changes with different Windows version. If other software than Windows Hyperterminal is used, consult with factory.

Windows 95 version:

Baud: 2400
Data: 7
Parity: ODD
Stop Bit: 1

Flow control: None

Windows 98, Windows 2000 and Windows XP Versions:

Baud: 2400
Data: 8
Parity: ODD
Stop Bit: 1

Flow Control: None

FORM A77151 REV1

FORM A77151 REV1

Windows 95 version:

Baud: 2400
Data: 7
Parity: ODD
Stop Bit: 1
Flow control: None

now control.

Windows 98, Windows 2000 and

Windows XP Versions:

Baud: 2400
Data: 8
Parity: ODD
Stop Bit: 1

Flow Control: None

FORM A77151 REV1

- If so equipped -

RS232 has been tested with Windows Hyperterminal. The setup changes with different Windows version. If other software than Windows Hyperterminal is used, consult with factory.

Windows 95 version:

Baud: 2400
Data: 7
Parity: ODD
Stop Bit: 1
Flow control: None

Windows 98, Windows 2000 and Windows XP Versions:

Baud: 2400
Data: 8
Parity: ODD
Stop Bit: 1
Flow Control: None

- If so equipped -

RS232 has been tested with Windows Hyperterminal. The setup changes with different Windows version. If other software than Windows Hyperterminal is used, consult with factory.

Windows 95 version:

Baud: 2400
Data: 7
Parity: ODD
Stop Bit: 1

Flow control: None

Windows 98, Windows 2000 and

Windows XP Versions:

Baud: 2400
Data: 8
Parity: ODD
Stop Bit: 1

Flow Control: None