

Do

- · Read all of the directions before using for the first time
- · Calibrate before use
- Keep the Unit, Sensor and Connections dry
- · Calibrate after replacing the batteries
- · Calibrate in air before every reading
- Make sure the R-17 is properly attached
- Visually inspect the sensor for leakage or water on the sensing surface before use
- Use the plastic Flow thru divertor when using the Tee piece
- · Remove the Flow thru divertor when measuring in a bag
- Clean the case with a damp cloth and mild detergent
- Remove the battery prior to extended storage

Don't

- Use the VN202 if you suspect any malfunction
- · Overheat or freeze the sensor
- · Open or try to repair a leaking or broken sensor
- · Immerse the sensor or instrument in any liquid
- · Pass hot or cold gas mixtures over the sensor
- Expose the unit to radio, short wave, microwave, X-Ray, high frequency or electromagnetic radiation
- Use cleaning agents or liquids in the cable receptacles or around the battery compartment
- · Place the VN202 unit in a water vapour saturated environment
- Expose the VN202 unit or sensor to excessive sunlight
- Expose the VN202 unit or sensor to temperatures greater than 40°C (106°F) or less than 0°C (-32°F)
- Use without locking the jackplug
- · Use if low battery indicator shows

© 1995 Vandagraph Ltd