

USER MAINTENANCE

Regularly monitor the THERMACOT TC400 TM during its operation to ensure satisfactory functioning.

- Check the power switch is illuminated
- Check that the louvres of the radiant warmer are not obstructed and there are no indications of unit overheating
- Check the mains supply cable is not trapped or damaged

Periodically check the functioning of the castors, brakes and tilt mechanism.

Report all faults immediately to an authorised engineer.

It is recommended that the THERMACOT TC400 TM should be inspected by an authorised engineer at intervals not exceeding six weeks.

Recommended cleaning

The radiant warmer housing must only be wiped clean with a DAMP cloth, and dried thoroughly. Never allow the ingress of water into this unit.

The cot stand and basinette may be washed with warm soapy water and thoroughly dried.

Routine Maintenance

It is recommended that the following maintenance routine should be carried out at intervals not exceeding six weeks.

1. Thoroughly clean the stand unit, cot units and the exterior and interior of the radiant warmer.
2. Inspect the mains plug, mains cable, stand unit, cot unit and radiant warmer for damage.
3. Functionally test the castors, brakes and tilt mechanism for correct operation.
4. Inspect all connectors and conductors within the radiant warmer for security and damage.
5. Carry out earth leakage tests in accordance with BS5724:PART 1.
6. Carry out insulation tests in accordance with BS5724:PART1.
7. Functionally test the radiant warmer to ensure satisfactory operation.