



Wave sensor gently through the air

Set Calibration to read 20.9%

It may vary due to atmospheric changes