

(5) Set the user card + the password
 Press * Management password # 11 #
 the password with 4-3 digits #


5. Deleting of user cards
 (1) Delete user cards by swiping the card
 Press * Management password # 17 #
 Swipe the card #
 (2) Delete user cards via the serial number
 Press * Management password # 19 #
 3-digit number #

(3) Delete one single password for opening the door
 Press * Management password # 22 #
 Door open password #
 (4) Delete all passwords for opening the door
 Press * Management password # 23 #
 Note: all passwords for opening the door will be deleted.

6. Restore factory settings
 (1) Press * Management password # 86 #. All factory settings will be restored and all data will be deleted after the instruction is input (the management password 990101 is restored).
 (2) Restore the original management password without deleting user data:
 Press RESET + # at the back to restore the management password to the original 990101
 (3) Restore the factory setting when the management password is forgotten the management password to the original 990101.
 Press RESET for five times + # once to delete all data and restore the management password to the original 990101.

(4) Change the delay in opening the door
 Press * Management password # 25 #
 Enter the 3-digit delay #
 in opening the door #
 It is 3 seconds by default and 255 seconds at a maximum.

7. Activation of the Product's Special Functions
 (1) Enable the door to be opened by any card
 Press * Management password # 83 #
 Note: The door can be opened by all card after this function is activated, whether or not the card is registered. Please disable the function after it is activated.

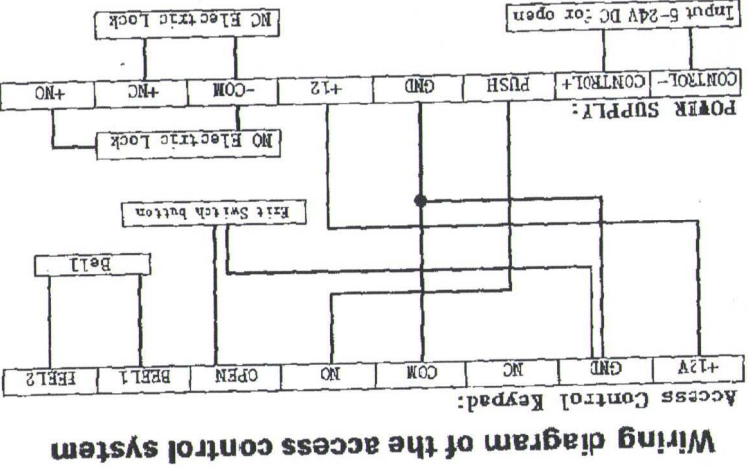

V. Wiring Diagram
 1. +12V : Anode of the power supply
 2. GND : Cathode of the power supply
 3. NO : Normally open point of the relay
 4. COM : Common point of the relay
 5. NC : Normally closed point of the relay
 6. OPEN: Switch button for going out
 7. BELL : Switch that can connect with the door bell

(2) Enable any card to be registered automatically
 Press * Management password # 84 #
 Note: Any card can open the door and is registered automatically after this function is activated. The card can operate as a valid user card after this function is disabled.

(3) Disable the function of automatic registration
 Press * Management password # 85 #