


Office Chairs-Direct

Ergo-Tek

High Back Executive Mesh Chair OPERATING INSTRUCTIONS

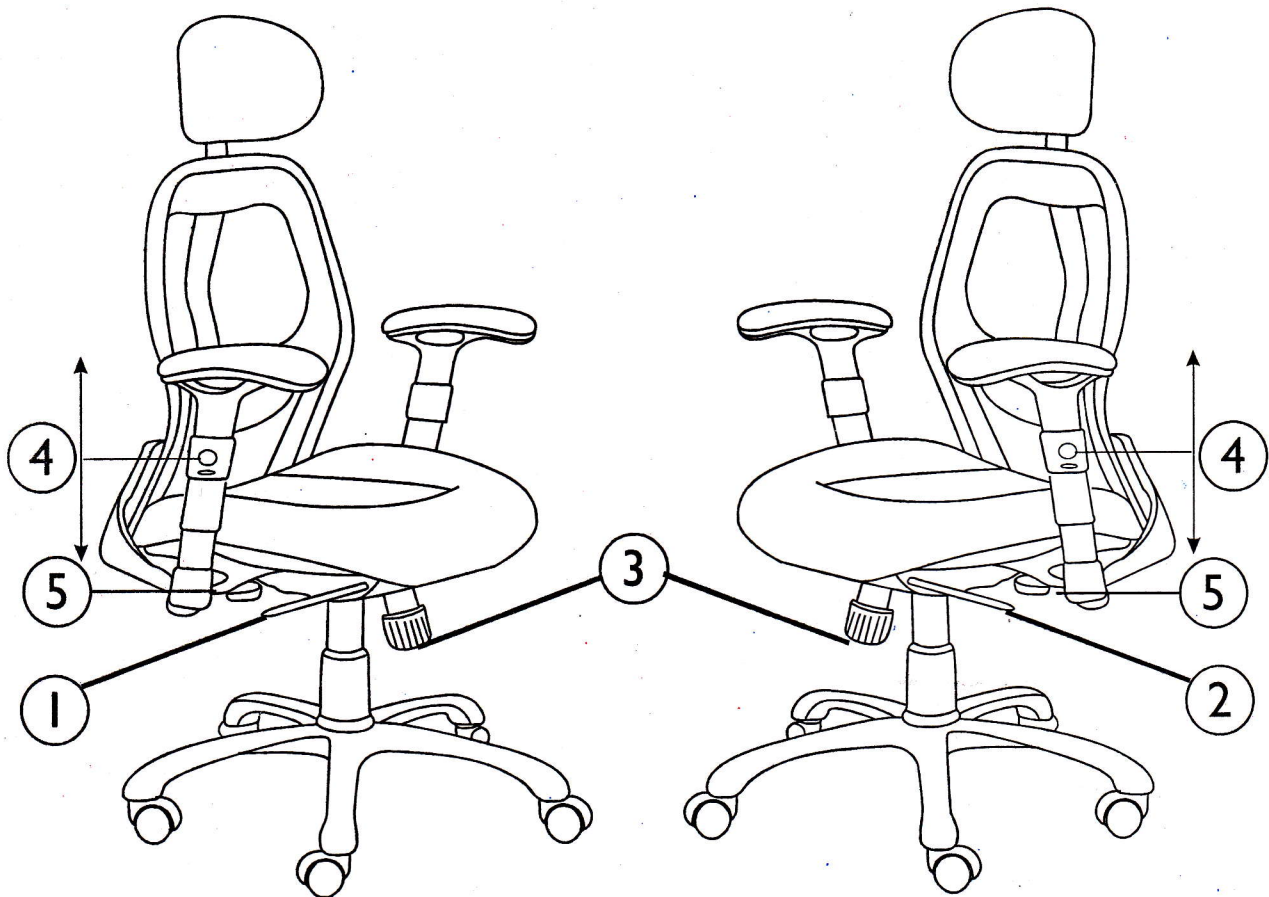

- 1: **Seat Height Adjustment:** Raise lever (1) to raise or lower height of seat
- 2: **Back Angle Adjustment:** Raise lever (2) to set back angle, push down to lock into desired position.
- 3: **Body Weight Tension Adjustment:** Wind hand wheel (3) clockwise to loosen and anti-clockwise to tighten.
- 4: **Arm Height Adjustment:** Push button (4) on side of arm and raise \ lower to desired position.
- 5: **Arm Width Adjustment:** Wind hand wheel (5) clockwise to loosen, slide arm in \ out to desired position then wind hand wheel (5) anti-clockwise to lock position.
- 6: **Headrest Angle Adjustment:** Wind hand wheel (6) clockwise to loosen, move headrest to desired position then wind hand wheel (6) anti-clockwise to lock position.
- 7: **Headrest Height Adjustment:** Push button (7) located central of the back and raise \ lower to desired position.
- 8: **Height Adjustable Lumbar Support:** Move lumbar support (8) up and down to desired position.
- 9: **Lumbar Depth Adjustment:** Wind hand wheel (9) clockwise to increase lumbar depth (towards your back) wind hand wheel (9) anti-clockwise to decrease lumbar depth.

