

# 9300 P877 RA (Preping Cables) criticon

Put relief about 9-5 cm down cable.

Strip covering off. ~~leave~~ leave red + yellow, cut orange + blue.

Cut red + yellow to 12-13 cm. strip 1mm off and on the ends.

Solder diodes to cable. Red left. yellow right.


Put in rack + put rubber top on.

Clear heat shrink, connector cover. black heat shrink

Strip bottom about 1/2. tin wire. cut to 1/2 cm. strip down to red + yellow. Join black + white on ends.


Heat shrink silver wire, fill pins with solder.

connect pins to wires.

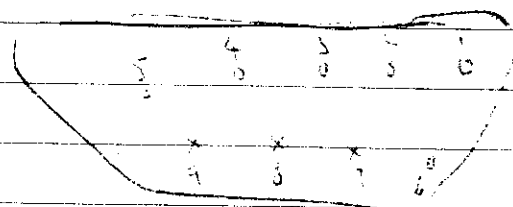

- 1 Black
- 2 inner shield
- 3 outer shield
- 4 ~~red~~ yellow
- 5 ~~yellow~~ red
- 6 white
- 7 —
- 8 —
- 9 —

2 bun.

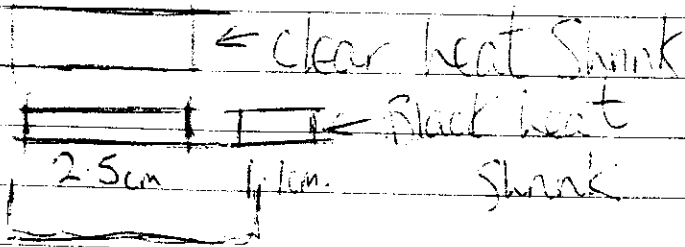

fasten with strip connector.

