




STEP 2. SAME AS P890 RA EXCEPT EXTRACT BLUE WIRE FOR DRIGDING.

STEP 4- PUT RED, YELLOW, ORANGE AND WHITE WIRES IN PINS,
PUT BOTH ENDS OF R1 RESISTOR IN PINS AS FOLLOWS-

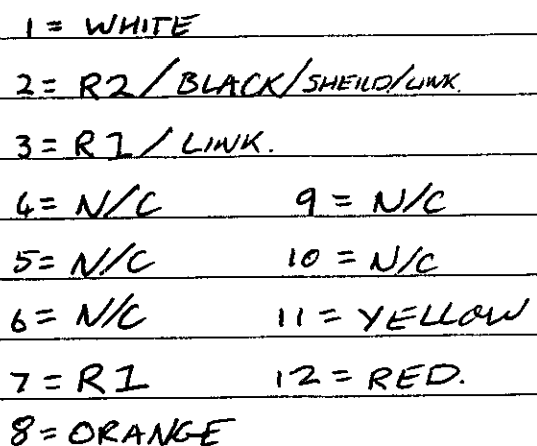

STEP 6- SOLDER SHEILDS & BLUE LINK WIRE, THEN COVER WITH
HEAT SHRINK. $R2 = 10R$



CONT.