


SPACELAB EXTENSION P926 E10THE OPASIT END!

STEP 1 - PLACE LARGE SLEEVE OVER CABLE (MAKING SURE CLEAR HEAT SHRINK IS ON CABLE) THEN BLACK STRAW RELEIF FOLLOWED BY CABLE GRIP.

STEP 2 - STRIP CABLE ACORDING TO CRITICOM, EXEPT REMOVE ~~THE~~ BLUE WIRE, ~~STRIP~~ STRIP INNER CABLE TO SAME LENGHT AS OUTER CABLE & GATHER SHEILDS, SPLIT EACH ONE IN $\frac{1}{2}$ THEN PLACE OPASIT $\frac{1}{2}$ 'S TOGETHER ~~AND~~ TWIST ~~AND~~ TIN. ~~END~~

STEP 3 - CUT ALL WIRES TO $1\frac{1}{2}$ CM & TIN ENDS, THEN PLACE & SOLDER INTO PINS.

STEP 4 - ~~PLACE~~ PLACE ALL PINS IN CASE AS FOLLOWS:-

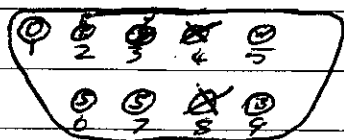

1 = ORANGE	6 = SHIELD
2 = RED	7 = SHIELD
3 = YELLOW	8 = N/C
4 = N/C	9 = BLACK
5 = WHITE	

