
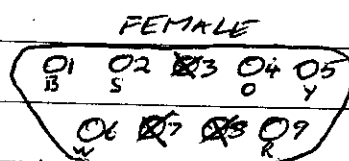


CRITICARE P968ES EXTENSION

- STEP 1- CUT 8' OF CABLE, PUT SLEEVE THEN CABLE GRIP ON CABLE.
- STEP 2- STRIP OUTER & INNER CABLE TO SAME ~~LEN~~ LENGTH
- STEP 3- REMOVE BLUE WIRE, & PUT BOTH SHIELDS TOGETH
- STEP 4- CUT ALL WIRES DOWN TO 1 1/2 CM THEN STRIP & TIN ENDS. CLAMP CABLE GRIP AS FAR TO END AS POSSIBLE.
- STEP 5- SOLDER WIRES INTO PINS AS FOLLOWS. -

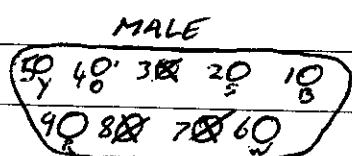

- 1 = BLACK 6 = WHITE
- 2 = SHIELDS 7 = N/C
- 3 = N/C 8 = N/C
- 4 = ORANGE 9 = RED.
- 5 = YELLOW

REMEMBER DO NOT FORGET CLEAR HEAT SHRINK FOR SERIAL No.

