


P 969E8 (CRITICARE) EXT

## FEMALE END

STEP 1 - ~~STRIP OUTER~~ PLACE STRAIN RELIEF & CABLE GRIP  
ON CABLE.

STEP 2 - STRIP OUTER & INNER CABLES APX 1" THEN  
STRIP & TIN ALL WIRES INC SHIELDS.

STEP 3 - SOLDERAS FOLLOWS -

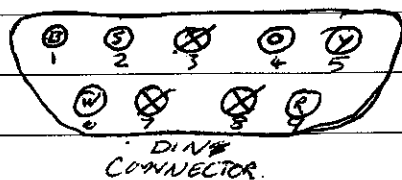

|             |          |
|-------------|----------|
| 1 = BLACK   | 7 = N/C  |
| 2 = SHIELDS | 8 = N/C  |
| 3 = N/C     | 9 = RED. |
| 4 = ORANGE  |          |
| 5 = YELLOW  |          |
| 6 = WHITE   |          |