



Clock Assembly for Cabinet.

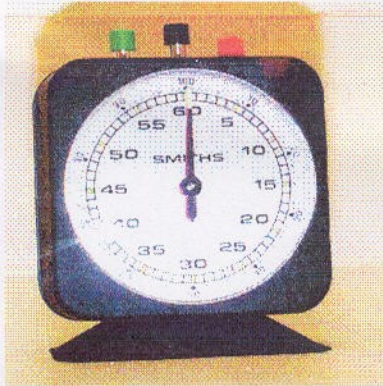

Parts required for clock assembly



- 1*Time Elapsed clock (Pt No 0310010)
- 1*Timer bracket (Pt No 0330020)
- 1* Dovetail (Pt No 0330030)
- 2*Washers (Pt No 0330080)
- 2*Bolts (Pt No 0330070)
- 2*Nuts (Pt No 0330075)
- 2*Bolts (Pt No 0330085)
- 1*Rail bracket (Pt No 03200103)

Remove two small Screws holding clock to base.


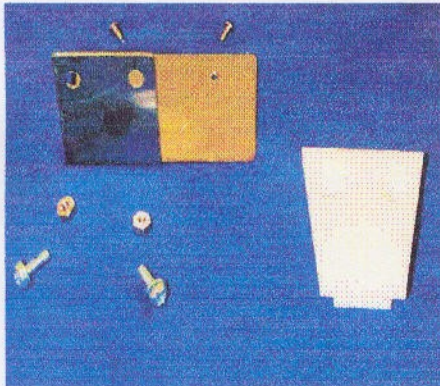


Using the parts shown assemble the clock mounting brackets.

1. Using clock bracket (Pt No 0330020) fix dovetail (Pt No 0330030) to it using bolts (Pt No 0330070), Nuts (Pt No 0330075) and washers on plate side (Pt No 0330080). Make sure dovetail has its narrow side to Bracket.
2. Fix clock to bracket using screws (Pt No 0330085) into holes in base of clock where original clock base was fitted.
3. Fit complete assembly to rail bracket (Pt No 0320010)then to cabine and check that clock is straight.

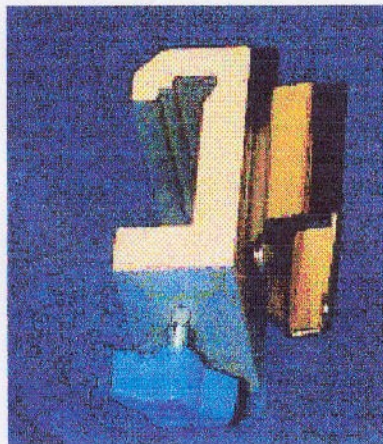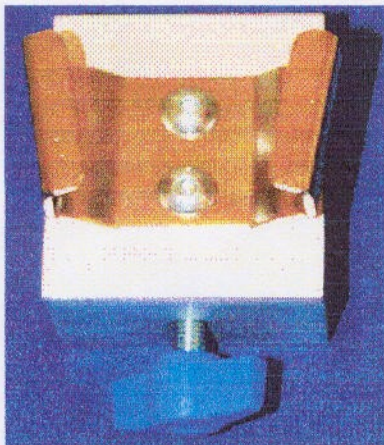

Rail bracket, Pt No 0320010..

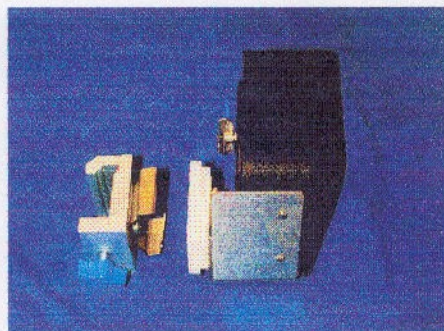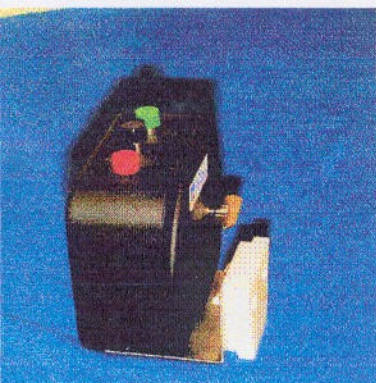

Completed assembly with rail clamp.