


23-3-99.

TC40012 SERIES

CABINET CONSTRUCTION

BA/10

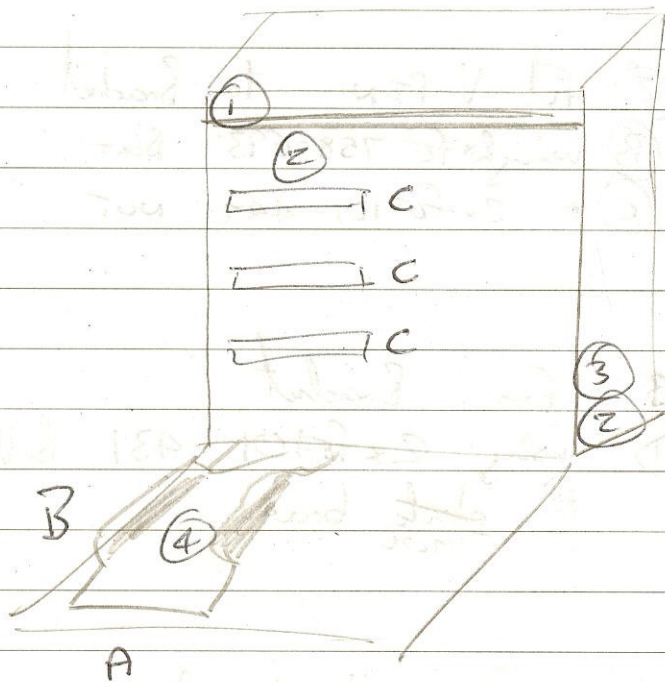

Fix

- (1) VIAMOD LABEL LOCK
- (2) VIAMOD ADDRESS LABEL
- (3) CE LABEL
- (4) BCD using 6x
FE 143-089 POZI

PAN HEAD SELF TAPPING
SCREW

Five centre screws 1st
locate bed. ± 5 mm from front
edge A ± 50 mm from front
edge B

- ENSURE RAILS C ARE TIGHT - use 150mm shifting spanner to tighten
- ENSURE DOOR CLOSURES CORRECTLY
- ENSURE ALL FIXTURES ARE TIGHT
- " NO METAL filings are present
- ENSURE RAILS C ARE LOWER
- ENSURE CABINET IS CLEAN

REMOVE BRETOR MARK LABELS

MAXIMUM TIME 10 MINS