


Assemble with teflon tape

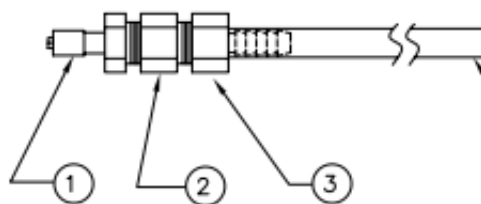

—to locate this diameter in the

ssage has been scanned

[Click here to Reply, Reply to all, or Forward](#)

CPCS & NPORS training facility Low rates call 08451289853  
www.theconstructionindex.co.uk

Powered by