


0019920

BUILD USING 0019568

REAR VIEW CONNECTOR.

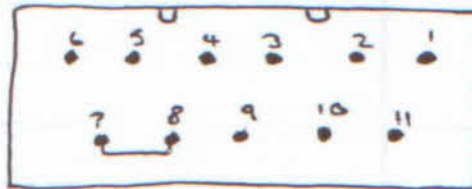

PN: 0031247

- | | |
|-----------|------------|
| 1, BLUE | 7, LINK |
| 2, YELLOW | 8, LINK |
| 3, RED | 9, BLACK |
| 4, - | 10, - |
| 5, WHITE | 11, ORANGE |
| 6, 8m | |

Remove the male connector of the 0019568 cable and replace with PN: 0031247.