


COMPANY OPERATING PROCEDURES			
Programming Apgar PCB Board			
Created:		VM3/COP/25.00	3
Revised:		Last printed 07 April 2011	Page 1 of 1

Programming Apgar PCB Board

- 1
- 2 PCB Board Needs to have Battery Holder Soldered into Place and Batteries inserted.
- 3
- 4 **Apgar Software**
 - 1 Load Softtec Microsystems -> INDART-STX -> ST7 -> DataBlaze Programmer
 - 2
 - 3
 - 4 Connect the Board
 - 5
 - 6 Select Device
 - 7
 - 8 -> ST7FLITE15
 - 9
 - 10 Option Bytes Set as Per ApgarBytes.bmp

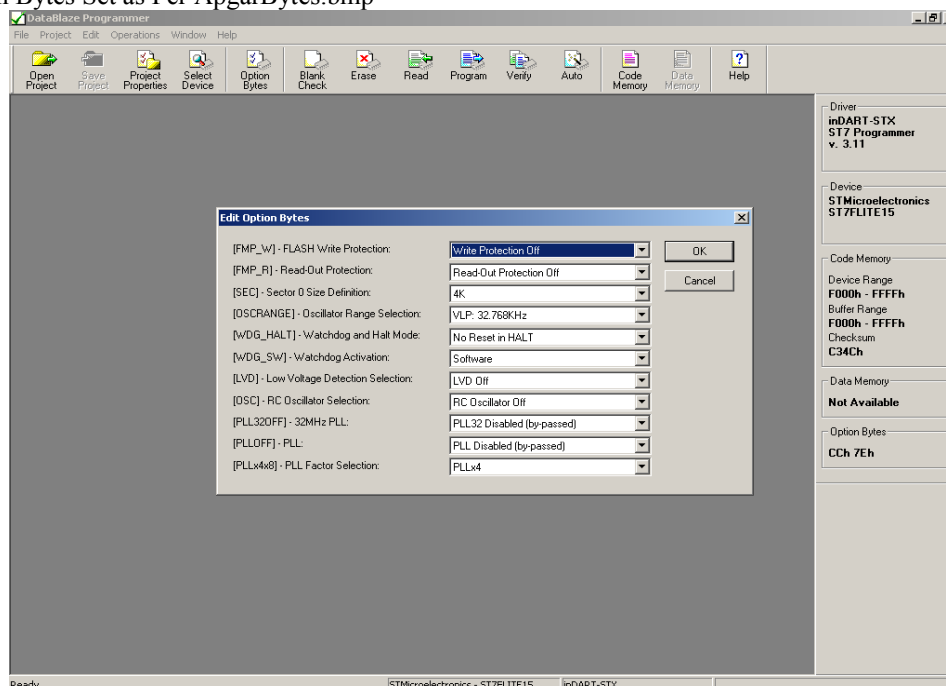

- 1
- 2
- 3 File -> Load -> Code Buffer
- 4 FORMAT Motorola S-Rec
- 5
- 6 Load A-main.S19
- 7
- 8 Connect Apgar board to Programmer Board using Cable,
- 9
- 10 Press the Switch on cable Twice,
- 11
- 12 Click Program.
- 13
- 14 Board Should now Be Programmed