

VM3COP37.65 Envitec Medical Oxygen Sensor Packaging Procedure

Parts list:

Part number:

0150012
9992515

Description:

Oxygen sensor box
Label - Medical Oxygen Sensor Viamed

Sensor list:

Part number:

0110014
0110018
0110019
0110020
0110021
0110023
0110040
0110039
0110041
0110042
0110044
0110045
0110047
0110048
0110049
0110058
0110560
0110660
0110800
0110809


Senor type:

R-15V
R-17V
R-17VI
R-22VI
R-22MEDV
R-23V
R-30V
R-22VA
R-41V
R-42V
R-44V
R-45V
R-47V
R-48V
R-49V
T-7V
OOM111
OOI103
OOMLF102
OOMLF103

- 1) Check the serial number, part number and date code of the sensor. A corresponding label will be affixed to the outer packaging.
- 2) Take the sealed sensor and place it under the retaining film of the sensor box.



3) Using the fold lines, close the within the box.

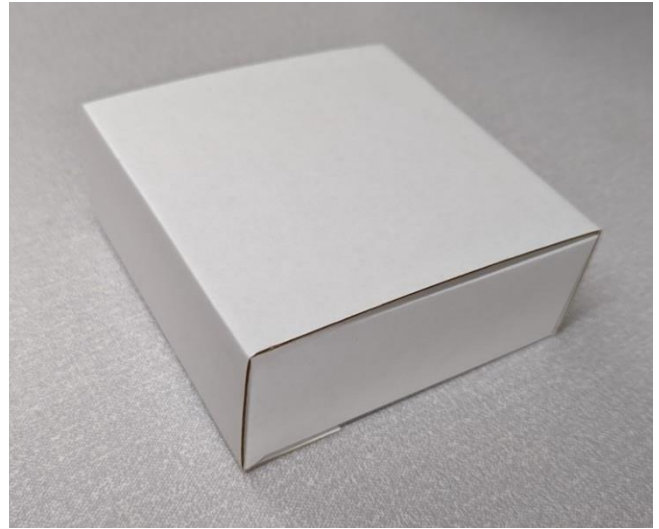

4) Affix the box label to the box. The label must be straight and not overhang the box edges.



5) Affix the corresponding serial number label the front the box.

