
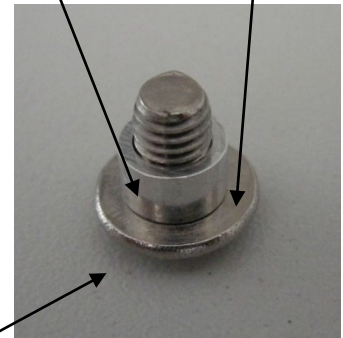


## Ceratherm 600-2/3 Radiant Warmers

### Installation Instructions for casing, part number 521-7198-3

- The new casing (part number: 521-7198-3) has six holes, each with a diameter of 8 mm (previously 6 mm).

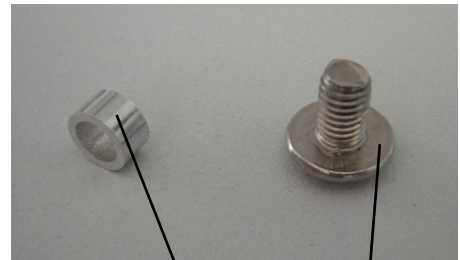

- The existing six mounting screws (M5 x 8) should be assembled with the supplied 7.0 x 1.0 x 4.0 support sleeves (part number: 521-79940100.10, set of 6).
- Each screw should then be fitted, together with a support sleeve.



- Using a screwdriver, tighten by hand until the screw stops. The screw head rests on the sleeve (not on the casing).



Observe different models!

- **Ceratherm 600-2:**  
Affix lateral the new warning labels, part number 521-161016 (2 pieces supplied) and reattach the existing type plate removed from the old casing. Use the old casing as a guide for the label placement.
- **Ceratherm 600-3:**  
Affix lateral the new warning labels, part number 521-161016 (2 pieces supplied). Type plate has not to be changed, it is placed on the chassis.



- Dispose of the old casing in accordance with local regulations