VM3COP38.09 Testing RS232 0111239 Teledyne AX/MX 300 Oxygen Monitor


Requirements,

PC with RS232 Port (com port)

Teledyne RS232 Cable. 0121204

Plug Cable into 0111239, and into the Comm Port of PC.


Example program used Putty.exe but any RS232 / Comms program will work.

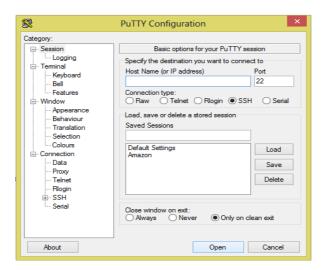

Find the Serial Options (bottom left)

RS232 Format

2400 Baud8 data bit1 Stop BitOdd Parity

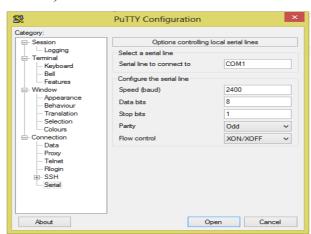

Open the Connection.
Unit updates every 2 seconds

output format on PC:

020.9

020.9

020.9